


MANUAL


LEJIADA PROJECTOR SCREEN

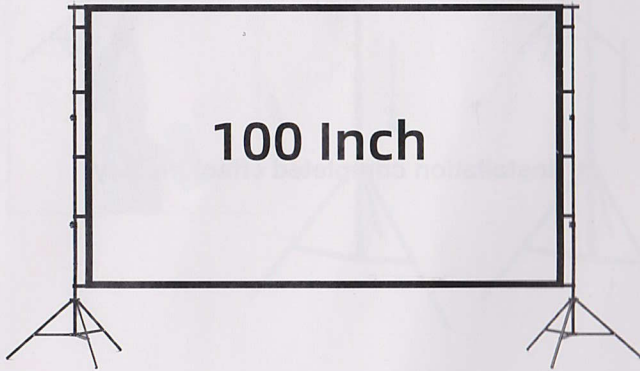

Outdoor Stand Screen

Package Include:

→ 100 Inch

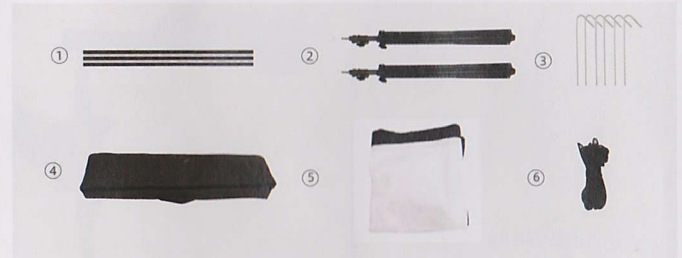

(1) Upper crossbarx3

(2) Tripod x2

(3) Ground Nails x6


(4) Storage bag x1

(5) Screen x1

(6) Windproof rope x6


Step 1: The 3 crossbars are assembled into a whole, which is used to support the upperpart of the screen.

→ 100 Inch

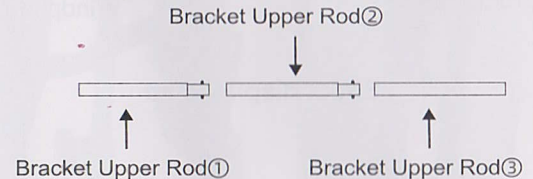


Projector Screen Installation Guide:


Step 2: Open the bag containing the projector screen and remove the projector screen for installation. Stitch together all the stitched rods with the projector screen, the specific steps are shown in the follows:

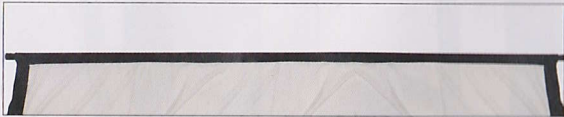

step 3: Loosen the screw on the top of the tripod, then use both hands to unfold the 3 feet and twist the screw to fix the tripod to support the left and right sides of the screen.

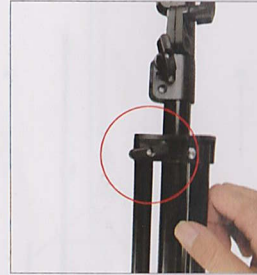


lose screw

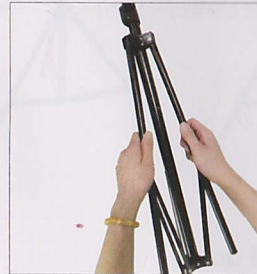



Twist the screws loose and tighten them to fix the tripod

Step 4: The tripod rod has screws to adjust the length up and down


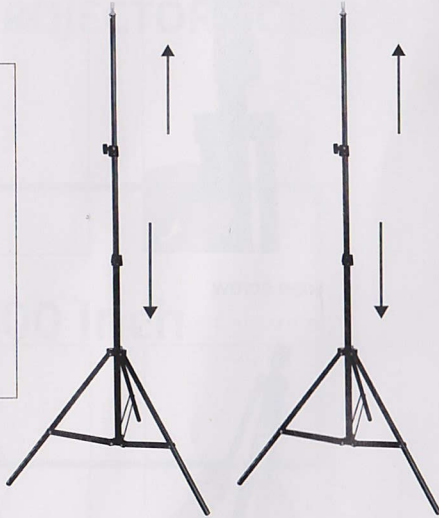


adjust up and down


Step 5: Connect the top of the tripod through the upper crossbar of the spliced curtain, fix it to 90 degrees, and then tighten the screws to fix it.

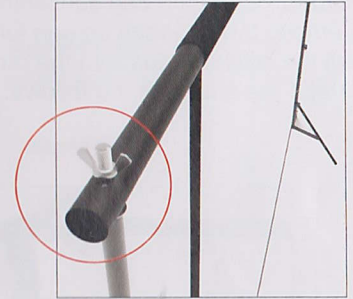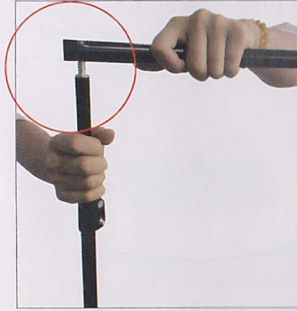


Step 6: The magic tape on the left and right sides of the screen is fixed to the tripod

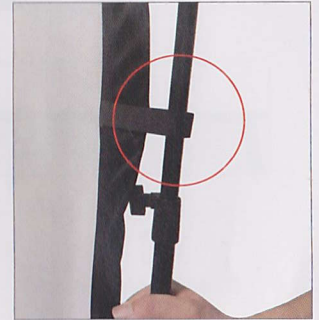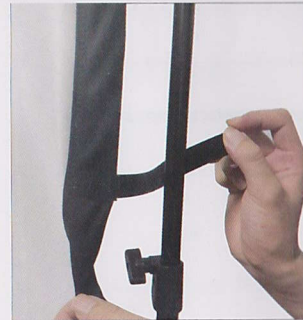

Step 7: Where there is dirt outdoors, it is possible to wrap a rope around the top of the double bracket and then fix it to the ground using ground nails.

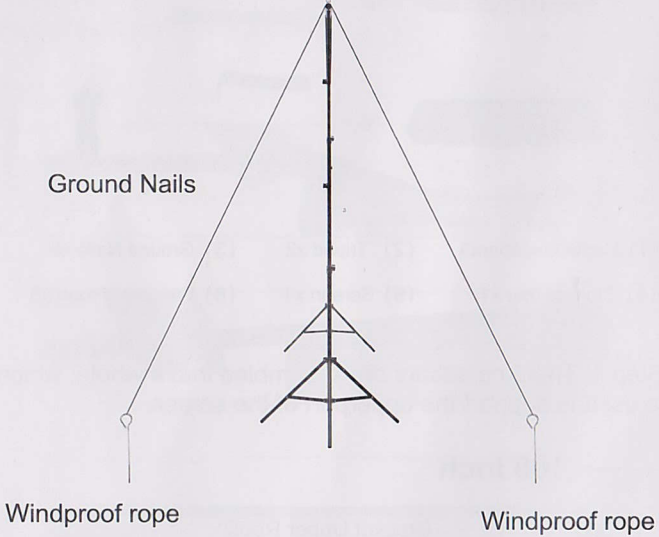

Effect display map

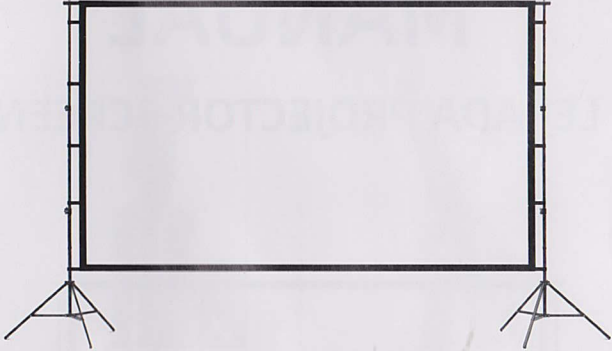

Installation completed effect display